


13. 1 CIRCUIT CONNECTION DIAGRAM AND MISCELLANEOUS PARTS

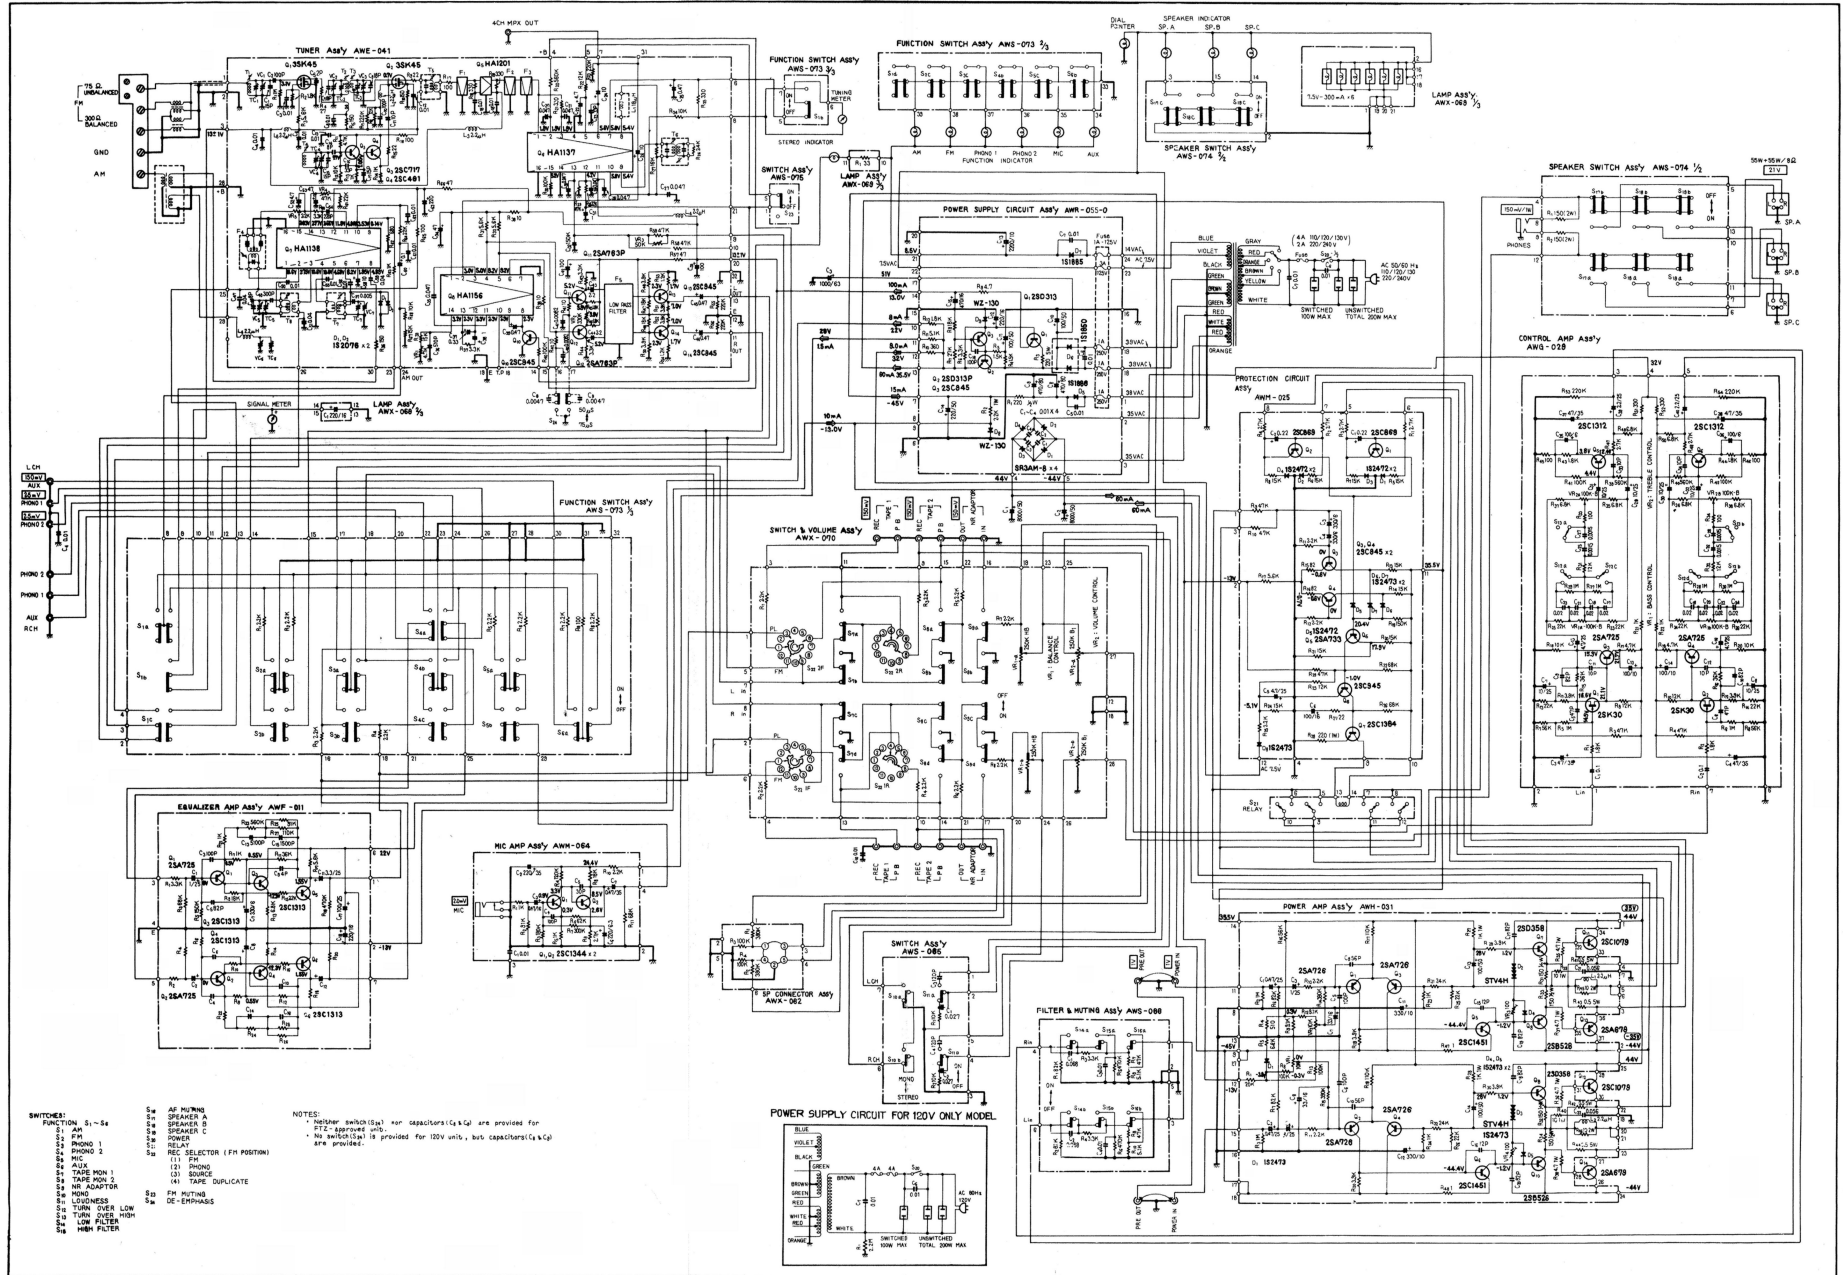

- SWITCHES:**
- S1 FUNCTION 1, 2, 3, 4
 - S2 AMP
 - S3 FM
 - S4 SPEAKER A
 - S5 SPEAKER B
 - S6 SPEAKER C
 - S7 POWER
 - S8 REC SELECTOR (FM POSITION)
 - S9 PHONO 1
 - S10 PHONO 2
 - S11 AUX
 - S12 TAPE MON 1
 - S13 TAPE MON 2
 - S14 NR ADAPTOR
 - S15 MIND
 - S16 LOUDNESS
 - S17 TURN OVER LOW
 - S18 TURN OVER HIGH
 - S19 MUTE
 - S20 HIGH FILTER

NOTES:

- * Tuner switch(S1) var capacitors(C4,C5) are provided for FTZ approved unit.
- ** No switch(S1) is provided for 120V unit, but capacitors(C4,C5) are provided.