



- | | | | |
|-------------|----------------------|----------------------|----------------------|
| 1 MIC | INPUT SELECTOR | BAND SELECTOR | MODE SELECTOR |
| 2 TAPE HEAD | S ₁ (a-h) | S ₂ (a-f) | S ₃ (a-e) |
| 3 PHONO-1 | 1 MIC → SET | 1 SHARP → SET | 1 STEREO REV |
| 4 PHONO-2 | 2 TAPE HEAD | 2 BROAD → AM | 2 STEREO NOR |
| 5 AUX-1 | 3 PHONO-1(LowZ) | 3 FM → | 3 MONO A |
| 6 AUX-2 | 4 PHONO-2 | 4 FM-MPX | 4 MONO B |
| 7 REC | 5 TUNER | | 5 MONO A+B |
| 8 MONI | 6 AUX | | |

J Band	U Band
C ₁ 15P	10P
C ₉ 15P	10P
C ₃₆ 10P	20P
C ₄₄ 500P	800P

○ CERA MIC
 △ OIL
 □ MICA
 * MYLAR
 * M.P con

LAST	R ₁₈₉ C ₁₇₀
------	-----------------------------------