



# SA-9500

KCU



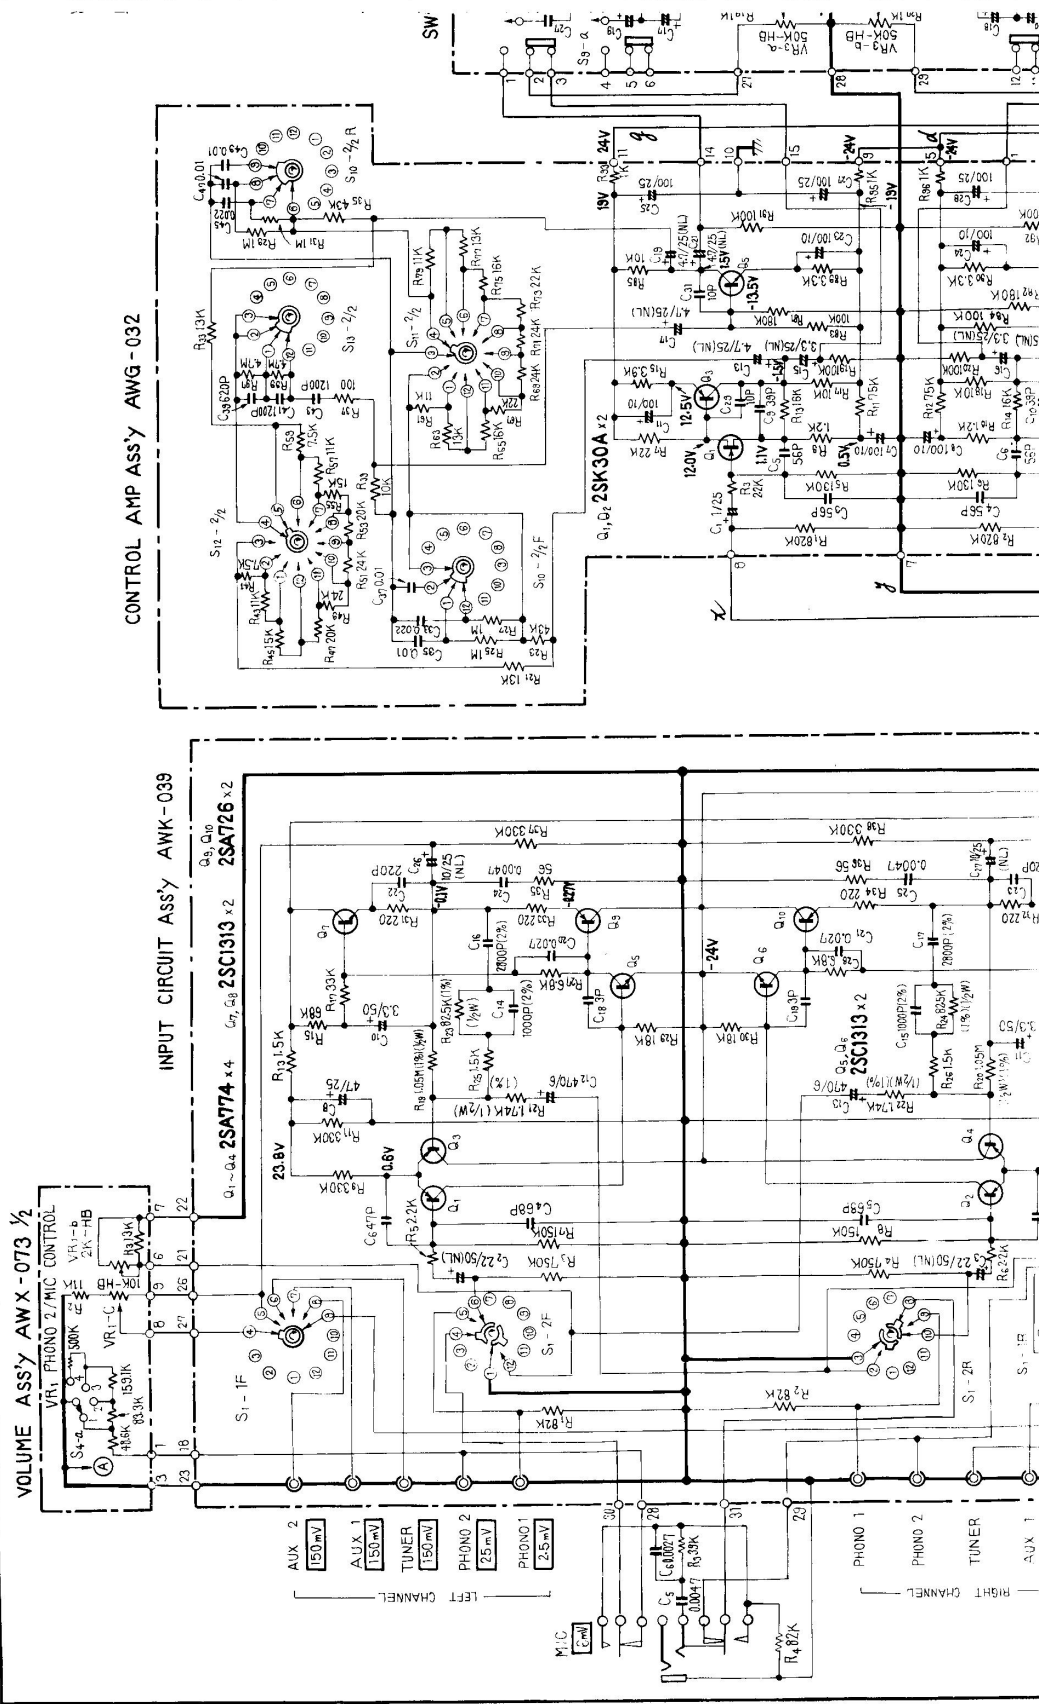

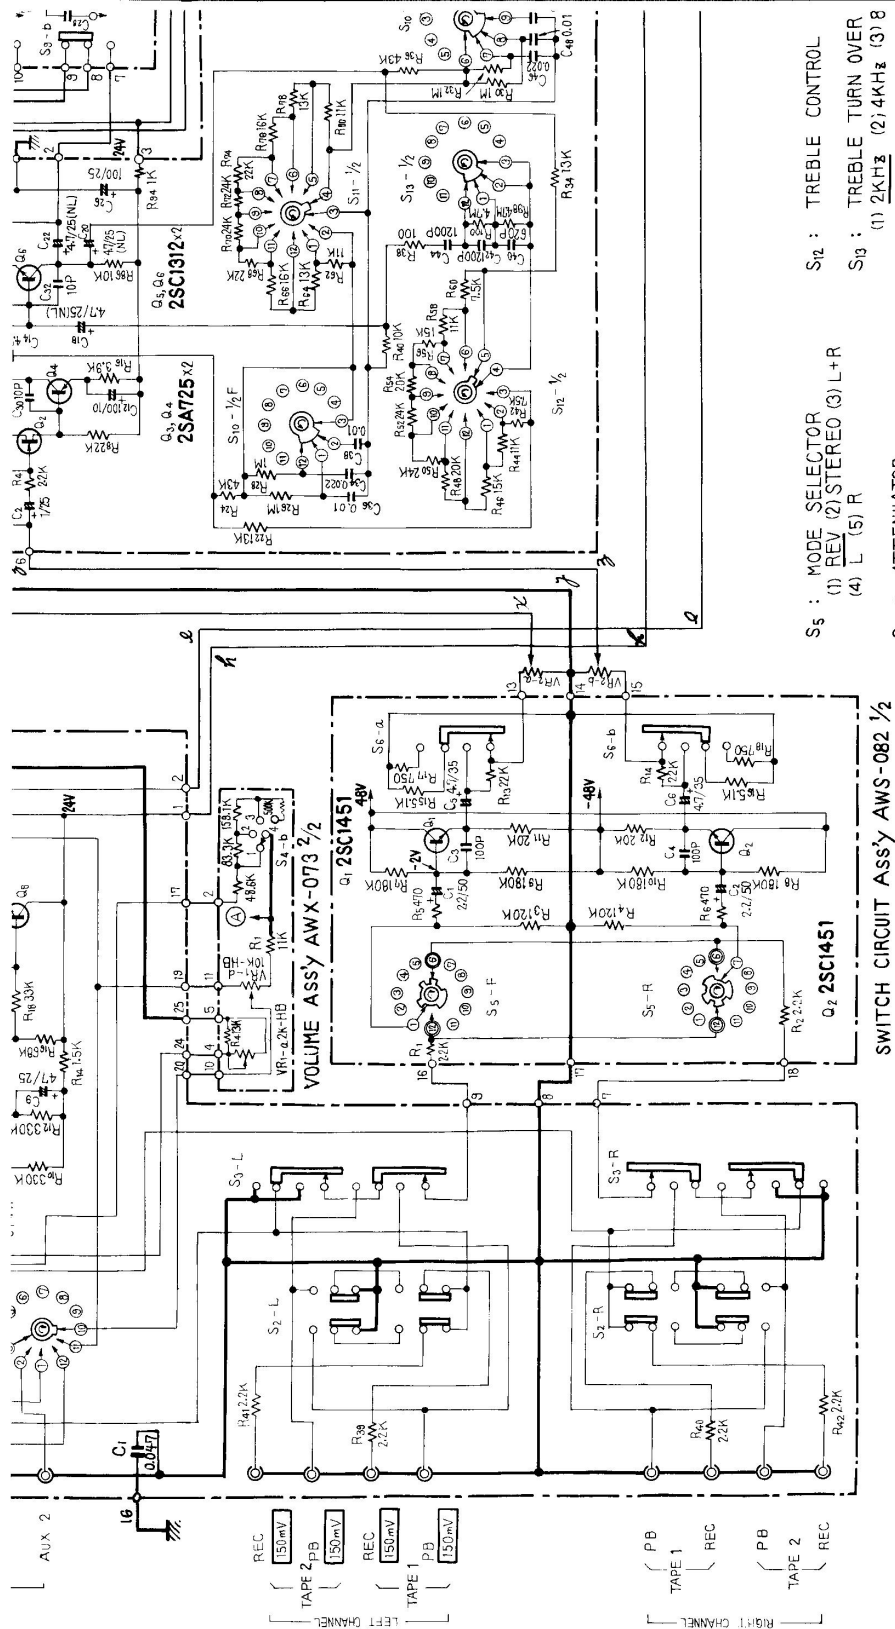

NOTES

- : SIGNAL VOLTAGE AT 1KHz
- V : DC VOLTAGE AT NO INPUT SIGNAL
- ◀ : DC CURRENT AT NO INPUT SIGNAL

POTENTIOMETER

- VR1 : PHONO 2 / MIC LEVEL
- VR2 : VOLUME
- VR3 : BALANCE

SWITCHES

- S1 : FUNCTION SELECTOR  
(1) PHONO 2 / MIC (2) PHONO 1 (3) TUNER  
(4) AUX 1 (5) AUX 2
- S2 : TAPE DUPLICATE  
(1) OFF (2) ON
- S3 : TAPE MONITOR  
(1) 1 (2) SOURCE (3) 2
- S4 : PHONO 2 IMPEDANCE  
(1) 35KΩ (2) 50KΩ (3) 70KΩ (4) 100KΩ

- S5 : MODE SELECTOR  
(1) REV (2) STEREO (3) L+R  
(4) L (5) R
- S6 : ATTENUATOR  
(1) 0dB (2) -15dB (3) -30dB
- S7 : LOW FILTER  
(1) 15Hz (2) OFF (3) 30Hz
- S8 : HIGH FILTER  
(1) 12KHz (2) OFF (3) 8KHz
- S9 : TONE  
(1) OFF (2) ON
- S10 : BASS TURN OVER  
(1) 100Hz (2) 200Hz (3) 400Hz
- S11 : BASS CONTROL
- S12 : TREBLE CONTROL
- S13 : TREBLE TURN OVER  
(1) 2KHz (2) 4KHz (3) 8
- S14 : PRE / POWER AMP.  
(1) NORMAL (2) SEPARA
- S15 : SPEAKER SELECTOR  
(1) OFF (2) A (3) B (4) A
- S16 : RELAY
- S17 : POWER  
(1) OFF (2) ON

